


# Quick Start Guide


## 1 INSTALL BATTERY

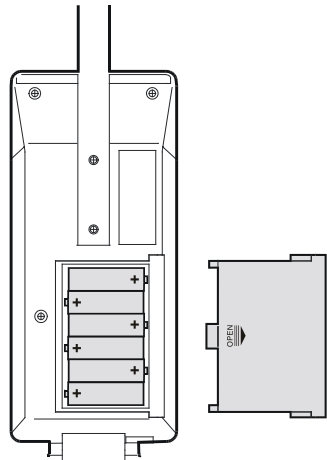

Alkaline battery: AA(5#) 6 pcs  
 Battery life: approximately 30 hours

- Remove batteries when the unit is not in use for extended periods
- New and old batteries can not be mixed

## 2 POWER ON AND INITIAL STATE

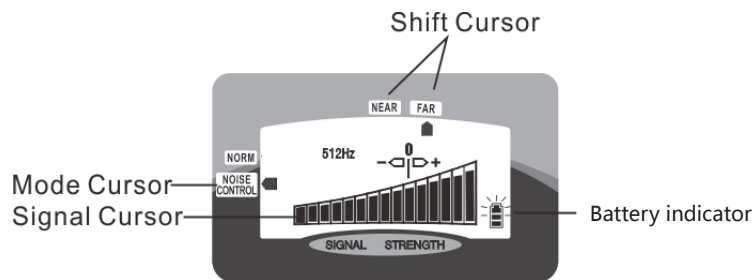


Press "mode key", choose noise control  
 Press "shift key", choose far

### Signal sensitivity and intensity cursor

The relative intensity of received signal is divided into 15grads. The more the number shows, the stronger the signal is. Grade 11 shows "0". Between the strongest and weakest signals, please choose "shift" key appropriately and adjust sensitivity button to get the signal show "0" which is more suitable for observing the changing the signal during the period of locating.


## 3 LOCATING

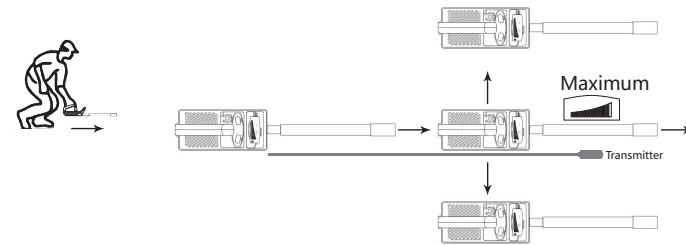

Move the locator front and back along the axial direction of the transmitter to find the point of maximum sensitivity, on the basis of which, move the locator right and left to find the point of maximum sensitivity which is the location of the locator.

## 4 DEPTH MEASURING

Keep locator moving close to the ground along the axial direction of the transmitter.

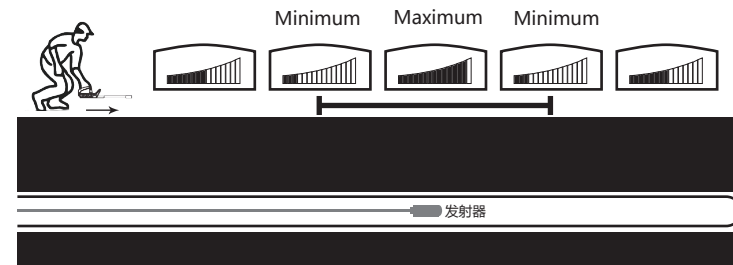

Half of the distance between two minimum is the depth from the ground to transmitter.